

# Ultra 390 Series Mount



Model Number as shown:  
UL390-T36-KB-A3-QG

**ICW**

# Ultra 390 Series Mount

## DESCRIPTION:

The Ultra 390 LCD and keyboard mounting system is your entire workstation on a wall track. Two handles next to the LCD tighten it into position once tilt adjustment is made. The keyboard tray (flat or ergonomic) is 19" wide and 10" deep and has a mouse tray that can be pulled out on either side. The keyboard tray is on two articulating arms that can be extended to 34" from the wall and is designed to be folded up when not in use.



Machined out of aluminum, this unit is powder coated for a durable, lasting finish. Hand assembly ensures a quality product.

## FEATURES:

- All models have a 36 in. track
- Choice of keyboard tray styles – flat, ergonomic or mini
- Choice of arm combinations

## SPECIFICATIONS:

Finish:	Gray or black
Weight capacity:	18 lbs (8.16 kg)
Mounting:	Wall track
Vert. adjustment range:	27"
Horiz. adjustment range:	20" for keyboard
Arm swivel at mount:	180°
Minimum profile:	4.5"*
Screen swivel:	360°
Screen tilt:	180°
VESA interface:	75mm and 100mm

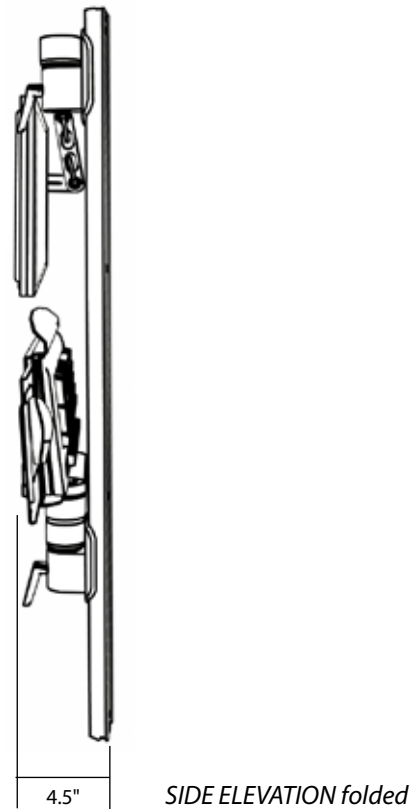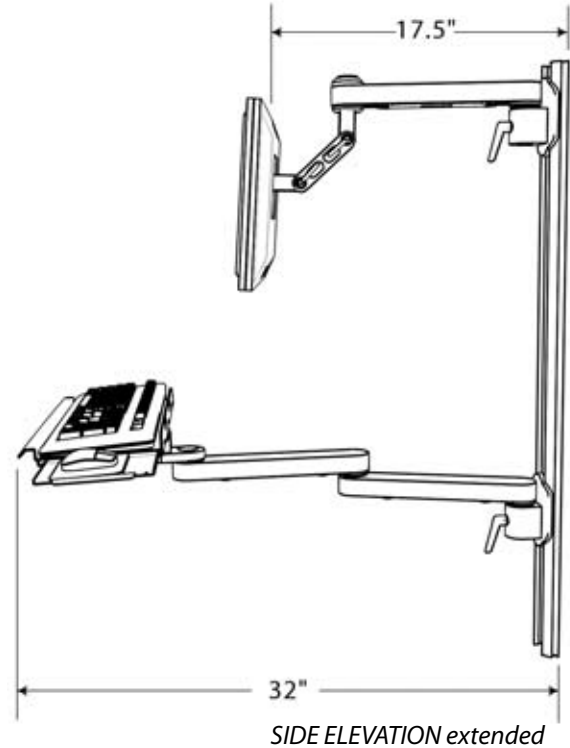

## OTHER CONFIGURATIONS

