


Single Arm Elite with Quicklink

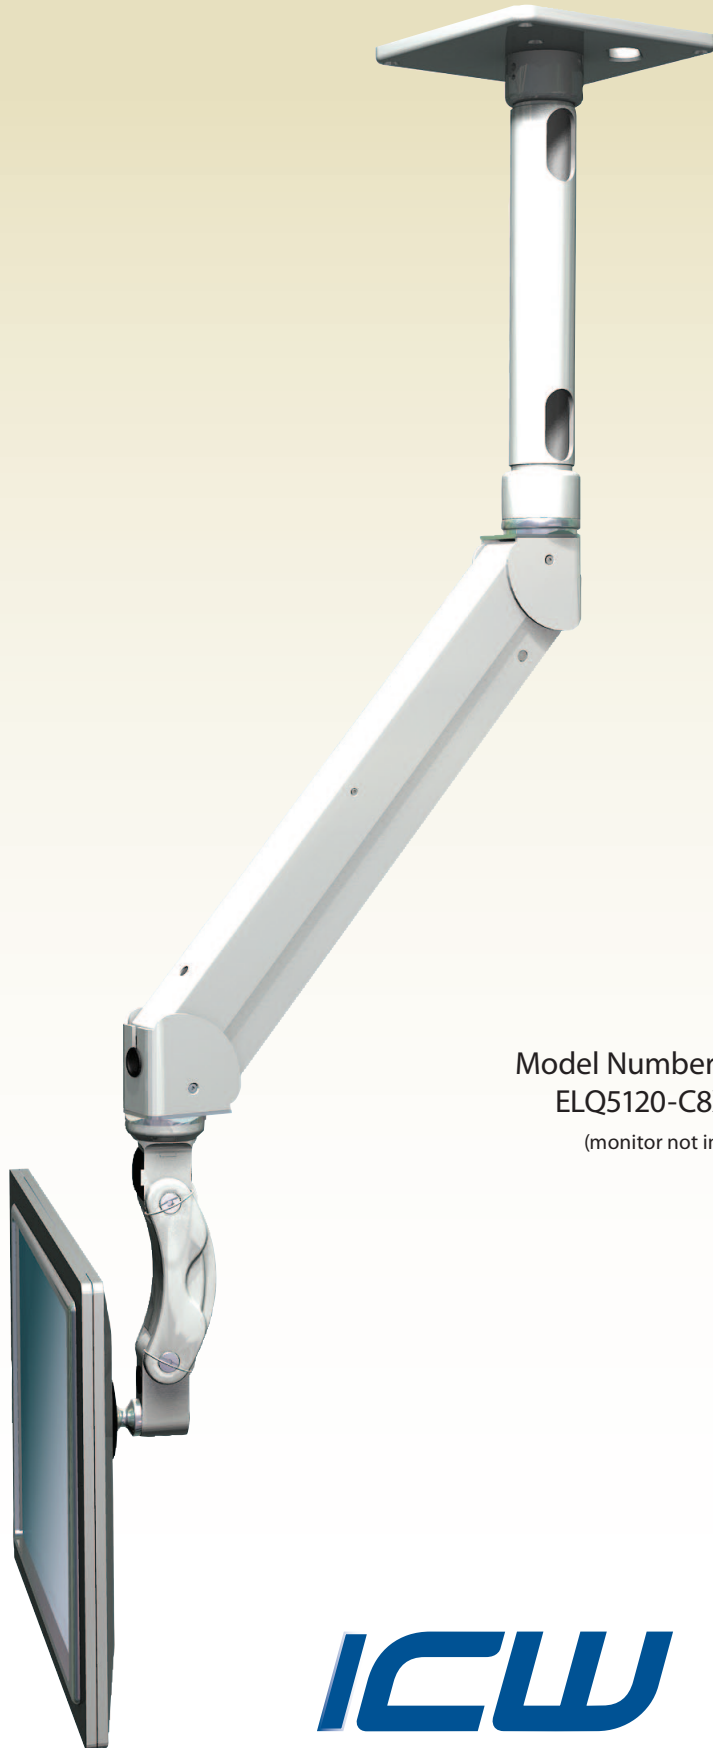

Model Number as shown:
ELQ5120-C8X12-QG
(monitor not included)

ICW

Single Arm Elite with Paralink Swivel

DESCRIPTION:

The single arm Elite with Quicklink incorporates design features allowing it to support up to 28 lbs (12.7 kg) while providing effortless movement. The Elite allows an LCD to be suspended and pulled out when required. The Elite is fully cable managed, gas spring assisted, and provides up to 21" of vertical and horizontal adjustment from mount to monitor, along with 180° of rotation.


Machined from billet aluminum, the unit is powder coated for a durable, lasting finish. Hand assembly ensures that a quality product is shipped to you.

FEATURES:


- Gas spring assisted
- Full cable management
- Effortless mobility

SPECIFICATIONS:

Finish:	Gray, black or medical white
Weight capacity:	28 lbs (12.7 kg)
Vert. adjustment range:	21"
Maximum reach:	33.6 "
Arm swivel at mount:	360°
Screen swivel:	360°
Screen tilt:	180°
VESA interface:	75mm and 100mm

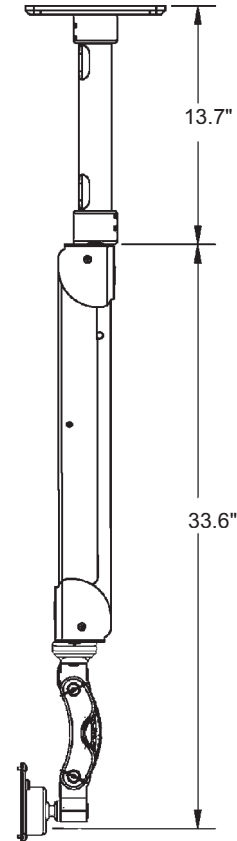

SIDE extended

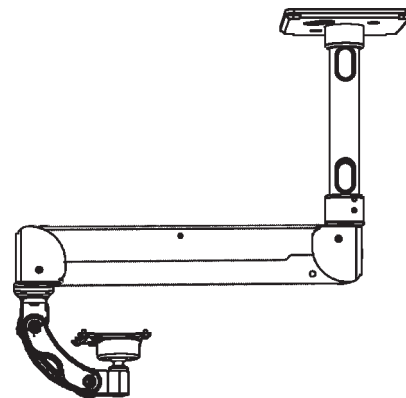

SIDE folded

